


77-130 R and R sealing and holding rails on sliding/lifting roof opening

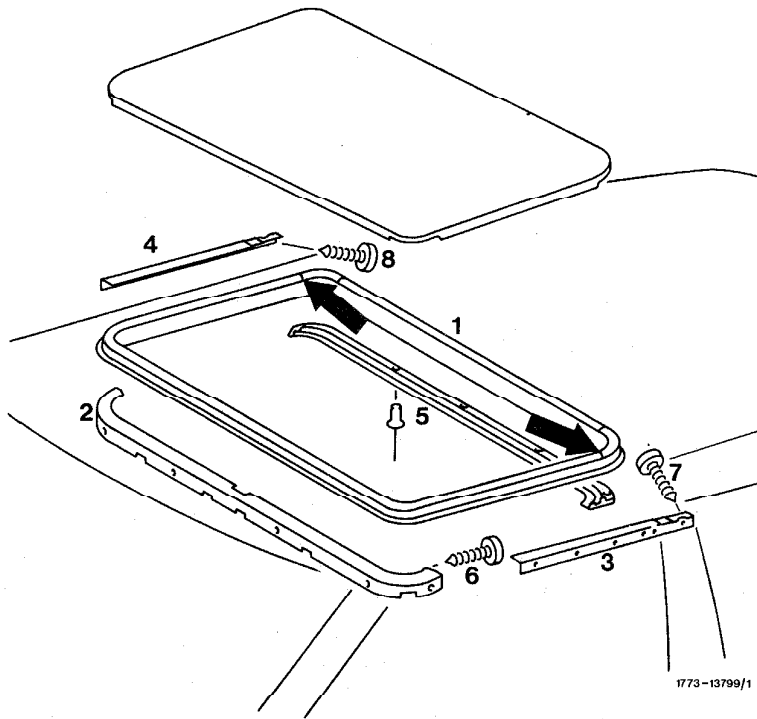

1773-13799/1

Sliding-lifting roof	Open, do not remove
Installation position of sealing	Mark on roof cutout at connecting points (arrows)
Sealing (1)	Pull out of holding rail 2, 3, 4 and 5
Wind deflector	Remove and install (77-250)
Screw (6)	Screw 6 each out and in
Holding rail (2)	Remove and install (refer to Installation note)
Screw (7) and (8)	Screw 8 each out and in
Holding rail (3) and (4)	Slip toward the rear and remove in upward direction
Holding rail (5)	Can be removed and installed only after removing sliding-lifting roof frame and boring out rivets (11 each)
Sealing (9)	Push into holding rail 2, 3, 4 and 5. The corrugations on plug profile should point upwards

Installation note

To make sure that the sealing (1) in holding rail 2, 3 and 4 is adequately held in place, a gap dimension of 3 mm must be maintained between holding rail and roof paneling.